

## 13 120/117 ED



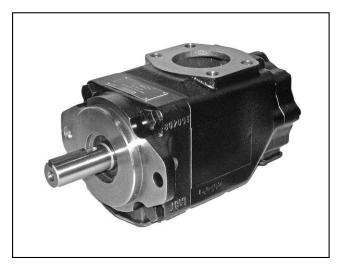

# FV7 FIXED DISPLACEMENT VANE PUMPS SERIES 10

### **OPERATING PRINCIPLE**

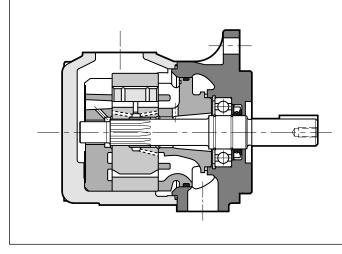

- The FV7 pumps are fixed displacement vane pumps, with several nominal displacement each. Single, double and triple pumps are available.
- The pumping group is composed of a cartridge element that contains rotor, vanes, cam ring and support plates. Cartridges are easily removable without disconnecting the pump from the hydraulic circuit, thus simplify the maintenance operations.
- The special elliptical profile of the cam ring, with double suction and delivery chambers one against the other, eliminates the radial thrusts on the rotor, reducing wear of the pump. The use of a 10 vane rotor reduces the delivery pressure pulsations, suppressing the vibrations and noise level of the pump.


#### PUMP SIZE (SINGLE) FV7B FV7D cm<sup>3</sup>/rev 5.8 ÷ 50 44 ÷ 137.5 Displacement range Flow rate range (at 1500 rpm - 0 bar) l/min 8.7 ÷ 75 66 ÷ 206 Operating pressure bar 320 250 Rotation speed (max) rpm 3600 3000 Rotation direction clockwise or anticlockwise Loads on shaft see diagrams Hydraulic connections **SAE J518 SAE J518** SAE J744 B or ISO 3019-2 SAE J744 C or ISO 3019-2 Mounting flange 26 Mass (empty single pump) 23 kg

HYDRAULIC	SYMBOLS
-----------	---------

|--|--|--|--|

Ambient temperature range	°C	-20 / +60		
Fluid temperature range (see par. 4)	°C	-10 / +70		
Fluid viscosity range	cSt	see paragraph 4		
Fluid contamination degree	see paragraph 4.3			
Recommended viscosity	cSt	30		

### **1 - IDENTIFICATION CODE**

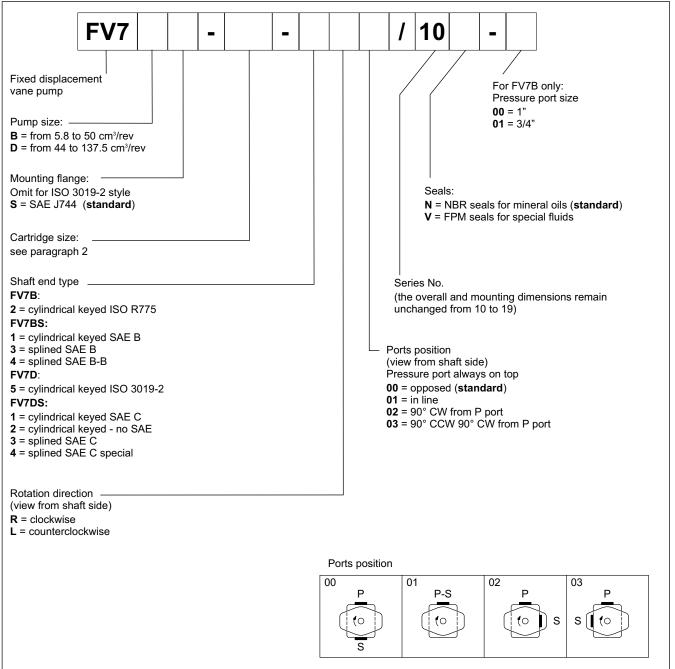


### 2 - PERFORMANCES

(obtained with antiwear mineral oil with viscosity of 24 cSt)

PUMP	CARTRIDGE SIZE	DISPLACEMENT [cm <sup>3</sup> /rev]	MAX FLOW RATE at 0 bar - 1500 rpm	PRES: [ba		ROTATION SPEED [rpm]		
		[cm//ev]	[l/min]	continuous	peak	max	min	
	02	5.8	8.7					
	03	9.8	14.7					
	04	12.8	19.2					
	05	15.9	23.9	320	250	3600		
	06	19.8	29.7	- 320	350	3600	600	
FV7B	07	22.5	33.8					
	08	24.9	37.4					
	10	31.8	47.7					
	12	41	61.5	275	300	3000		
	15	50	75	240	280	3000		
	14	44	66			3000	600	
	17	55	82.5					
	20	66	99					
	22	70.3	105.5		300			
	24	81.1	121.7	250				
FV7D	28	90	135	1				
	31	99.2	148.8					
	35	113.4	170.1	1	280	2800		
	38	120.6	180.9	1	280			
	42	137.5	206.3	230	260	2500		

### **3 - IDENTIFICATION CODE FOR DOUBLE PUMPS**

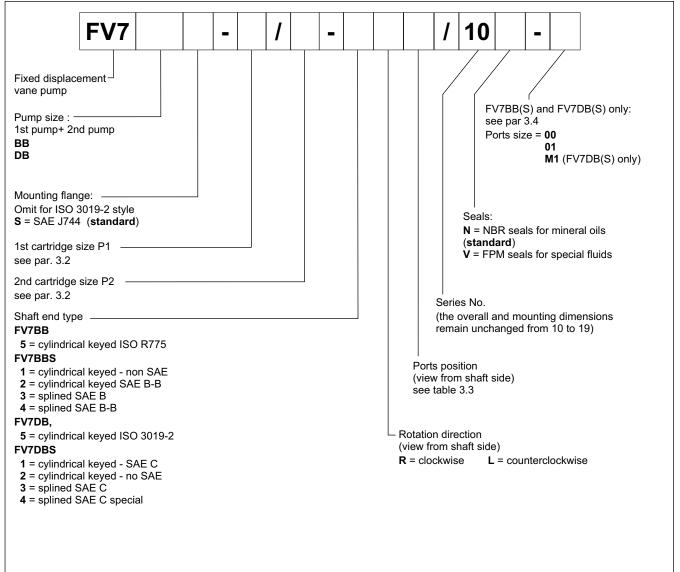

#### 3.1 - Triple pumps


Triple pumps available. Please contact our technical office.

#### 3.2 - Available cartridges

Grey boxes indicates reduced performance. See paragraph 2 for limits. The second cartridge (for P2) should have equal or lower displacement than the first.

В	В	DB				
1st cartridge	2nd cartridge	1st cartridge	2nd cartridge			
02	02	14	02			
03	03	17	03			
04	04	20	04			
05	05	22	05			
06	06	24	06			
07	07	28	07			
08	08	31	08			
10	10	35	10			
12	12	38	12			
15	15	42	15			

### 3.3 - Ports position codes

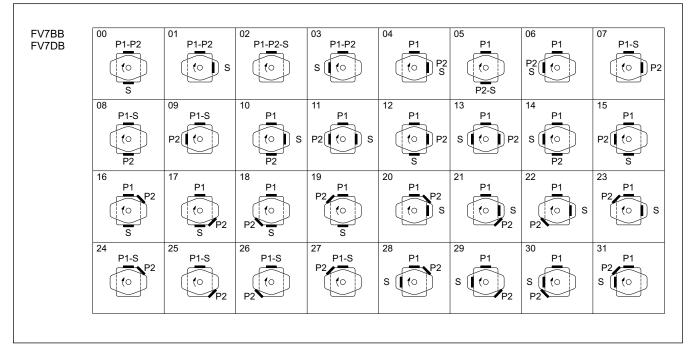

### 3.4 - Ports dimensions

	FV7BB								
	P1 P2 S								
00	1"	3/4"	2" 1/2						
01	3/4"	5/4	2 1/2						

FV7DB									
	P1	P2	S						
00	1" 1/4	1"							
01	1" 1/4	3/4"	3"						
M1	1 1/4	5/4							

NOTE : M1 version is metric threaded

### 4 - HYDRAULIC FLUID

Data in this catalogue are obtained with antiwear fluid petroleum base. Minimum allowable inlet pressure 0,8 absolute bar (-0,2 relative bars). Differential pressure between inlet and outlet pressure should be at least 1.5 bar.

Pressures, maximum allowed speeds and recommended temperatures are shown in the table below, according to the types of hydraulic fluid used.

FLUID TYPE	NOTES							
HFC (water glycol solutions with proportion of water ≤ 40%)	The performance ratings shown in the table 'PERFORMANCES' must be reduced as follows:         max continuous pressure:       140 bar         max peak pressure:       175 bar         max rotation speed:       1800 rpm							
	<ul> <li>Minimum allowable inlet pressure 1 absolute bar</li> <li>The fluid maximum temperature must be between 10°C and 50°C.</li> <li>Use NBR seals only.</li> <li>Minimum viscosity 18 cSt</li> </ul>							
HFD (phosphate esters)	The performance ratings shown in the table 'PERFORMANCES' must be reduced as follows:         max continuous pressure:       210 bar         max peak pressure:       240 bar         max rotation speed:       1800 rpm         - Minimum allowable inlet pressure 1,08 absolute bar         - The fluid temperature must be between -18°C and 70°C.         - Use VITON seals         - Minimum viscosity 18 cSt							

### 4.2 - Fluid viscosity

The operating fluid viscosity must be within the following range:

minimum viscosity	10 cSt	referred to the maximum temperature of 90 °C of the fluid, with antiwear
optimum viscosity	30 cSt	referred to the operating temperature of the fluid in the tank
maximum viscosity	840 cSt	limited to only the pump start-up phase at cold start.

When choosing the fluid type, verify that the true viscosity at the operating temperature is within the above range.


#### 4.3 - Degree of fluid contamination

The degree of fluid contamination must be according to ISO 4406:1999 class 19/17/14 or better. Strainers on inlet port are not recommended. However, if requested, do not exceed 149 micron (100 mesh).

### **5 - CHARACTERISTIC CURVES OF SINGLE PUMPS**


### 5.1 - FV7B

#### **INTERNAL LEAKAGE (typical)**

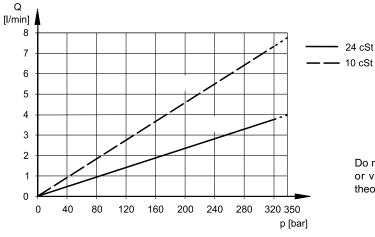


Do not operate the pump more than 5 seconds at any speed or viscosity if the internal leakage is more than 50% of theoretical flow.


### PERMISSIBLE RADIAL LOAD

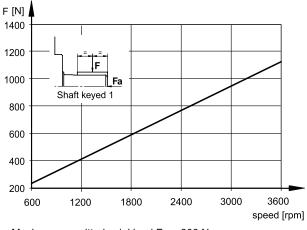


Maximum permitted axial load Fa = 800 N

#### POWER LOSS HYDROMECHANICAL (typical)

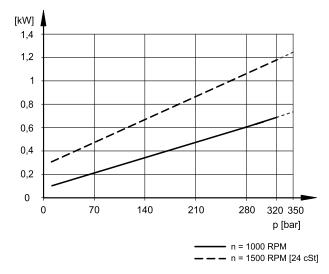

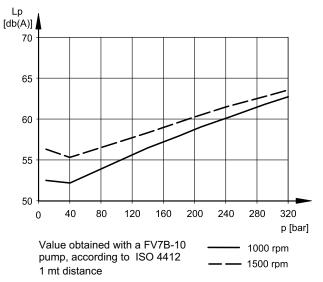




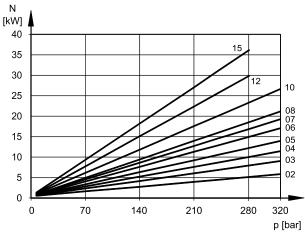




### 5.2 - FV7D


#### **INTERNAL LEAKAGE (typical)**

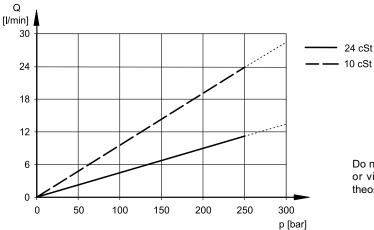

### PERMISSIBLE RADIAL LOAD

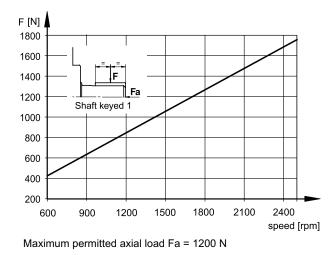


#### POWER LOSS HYDROMECHANICAL (typical)

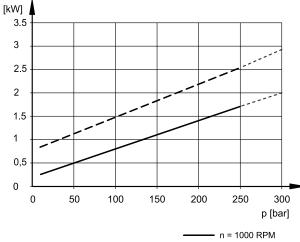


<sup>- -</sup> n = 1500 RPM [24 cSt]

Do not operate the pump more than 5 seconds at any speed or viscosity if the internal leakage is more than 50% of theoretical flow.

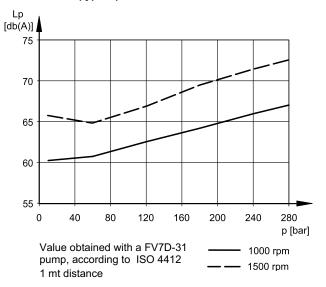




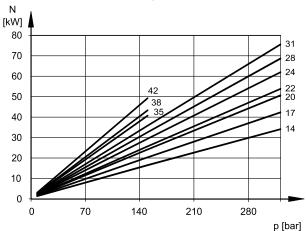


### 6 - CHARACTERISTIC CURVES OF DOUBLE PUMPS

### 6.1 - FV7BB

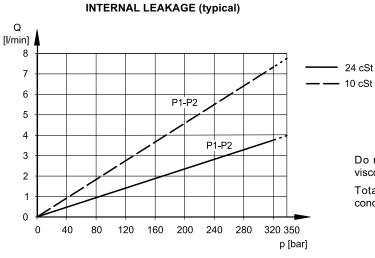


Do not operate pump more than 5 seconds at any speed or viscosity if the internal leakage is more than 50% of theoretical flow Total leakage is the sum of each section loss at its operating conditions.

PERMISSIBLE RADIAL LOAD

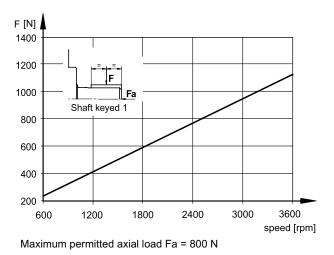


#### POWER LOSS HYDROMECHANICAL (typical)

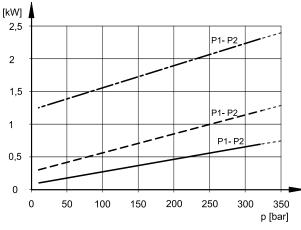


Total hydromechanics power loss is the sum of each section at its operating conditions.


n = 1000 RPM n = 1500 RPM [24 cSt] n = 2800 RPM

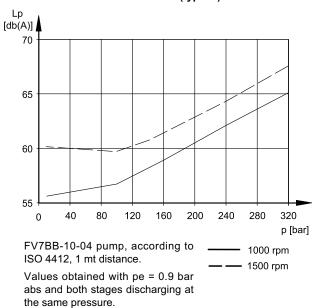


### 6.2 - FV7DB

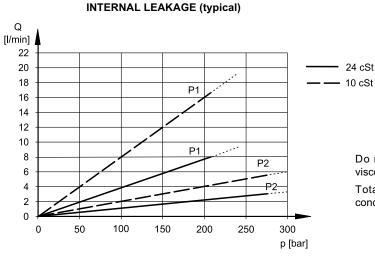

PERMISSIBLE RADIAL LOAD

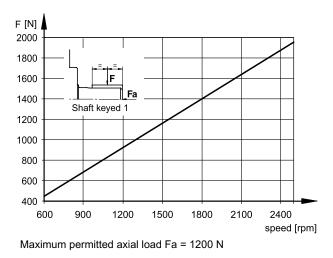


#### POWER LOSS HYDROMECHANICAL (typical)

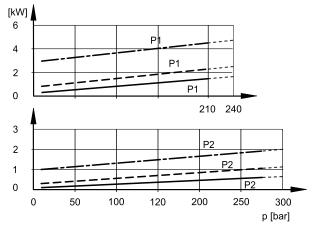


Total hydromechanics power loss is the sum of each section at its operating conditions.

Do not operate pump more than 5 seconds at any speed or viscosity if the internal leakage is more than 50% of theoretical flow Total leakage is the sum of each section loss at its operating conditions.

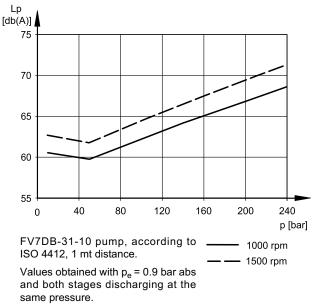


### 7 - SINGLE PUMPS OVERALL AND MOUNTING DIMENSIONS

### 7.1 - FV7BS

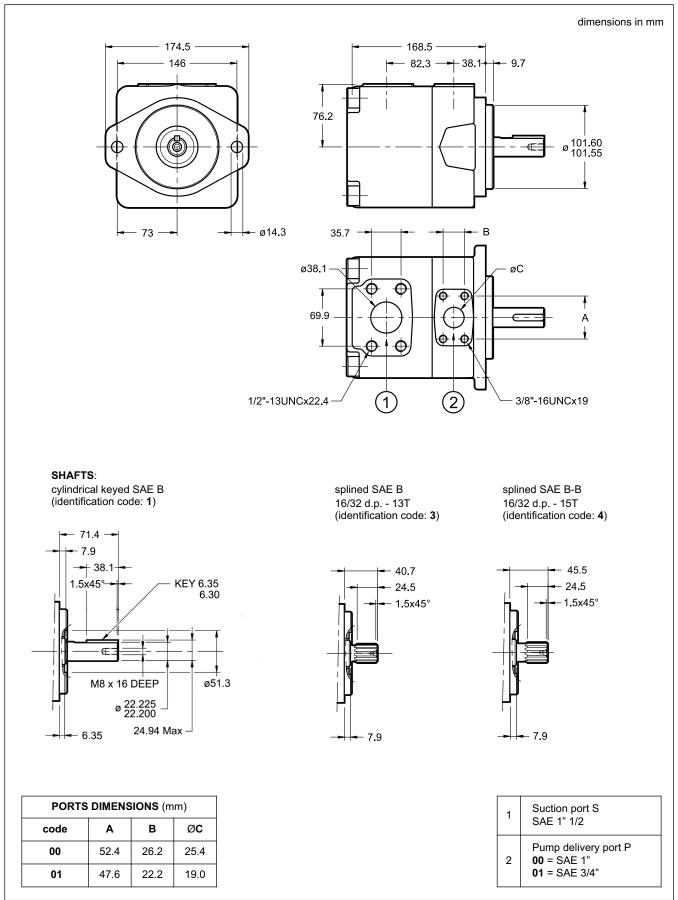




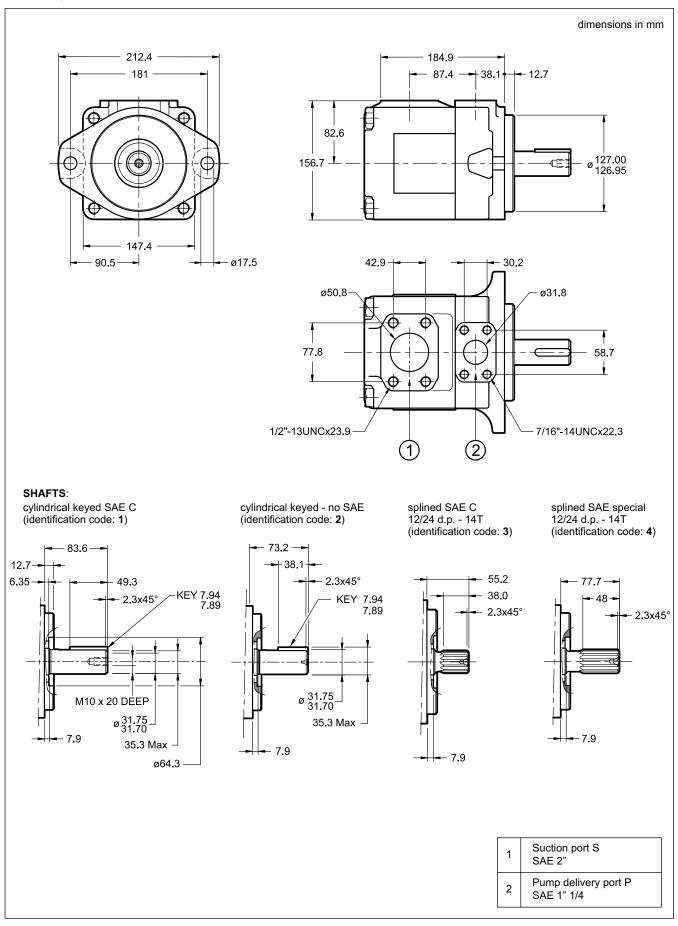


### 8 - DOUBLE PUMPS OVERALL AND MOUNTING DIMENSIONS

### 8.1 - FV7BBS

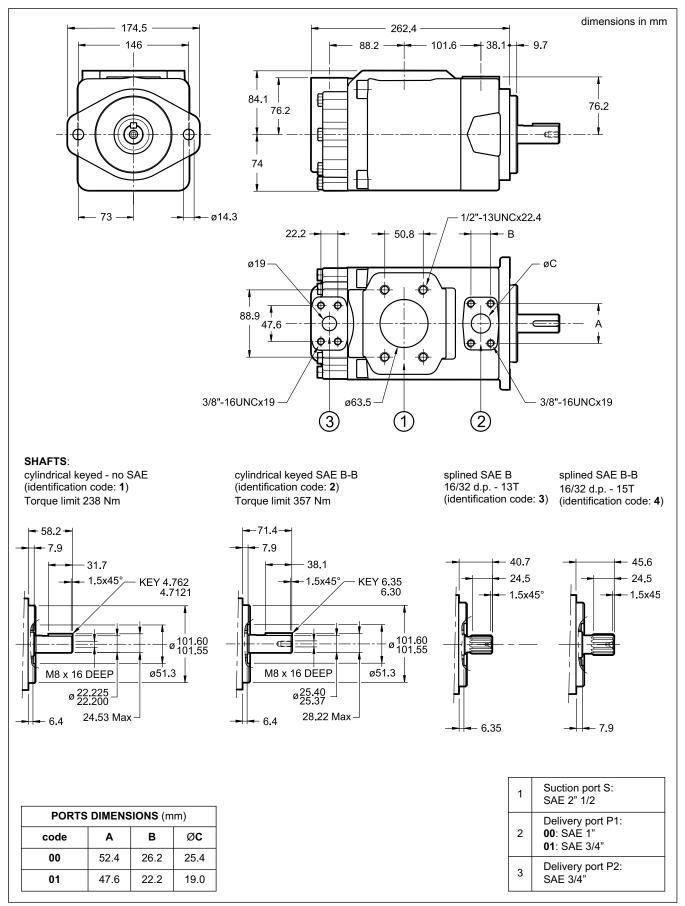


#### 8.2 - FV7DBS

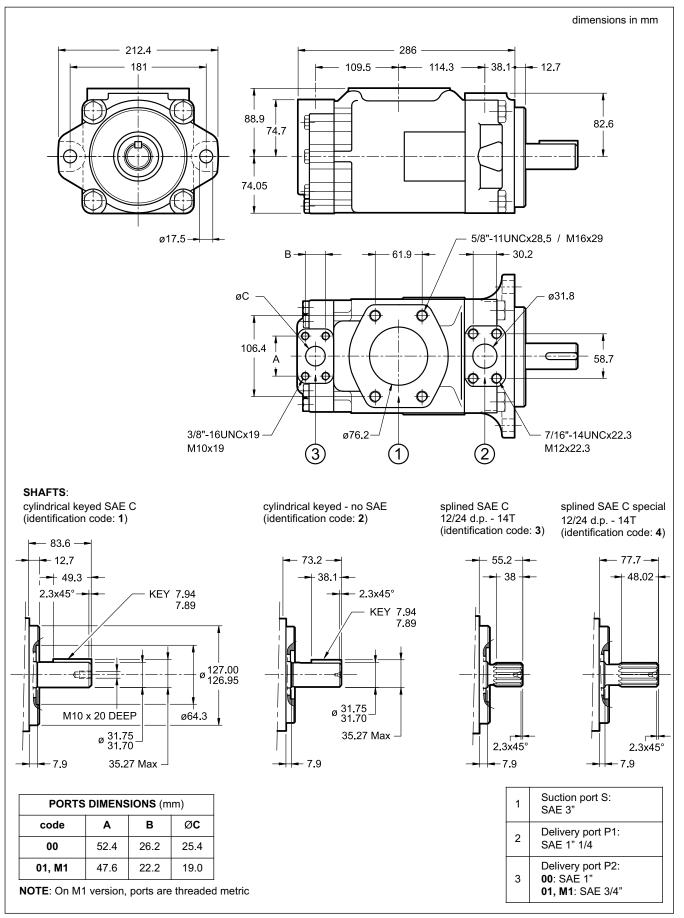


### 9 - ISO MOUNTING VERSIONS

### 9.1 - FV7B and FV7BB

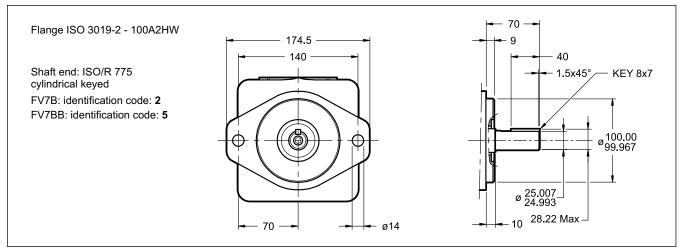

#### 9.2 - FV7D and FV7DB

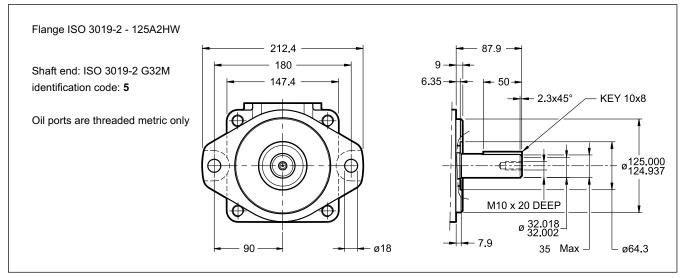

### **10 - INSTALLATION AND START-UP**


- FV7 pumps can be installed in any position. They are normally positioned directly above the oil tank. The installation below the oil level is suggested for circuits with high flow rates and pressures.
- The suction line must be sized to facilitate the oil flow. Bends and restrictions or an excessive line length could impair the operation of the pump. A bevel on both suction and return lines is recommended to increase the surface and so lower the velocity. We suggest a 45° minimum angle.
- Check the rotation direction of the motor is according to the rotation direction shown on the pump label before start up.
- The pump start-up should occur with the pump unloaded, especially at cold temperatures. Set the pressure relief value of the circuit to its minimum setting value so the pump is unloaded when started. Circuit priming and air bleed off have to be performed before resetting the pressure relief value.
- A minimum pump shaft speed of 600 rpm is recommended for priming. To prevent possible damage to the internal parts, the pump should never be started dry or without internal lubrication. The pump should prime quite instantly (few seconds). If not, shut down and check conditions.

Pump with positive head: allow the fluid to flow to the pump inlet, loosen the discharge port(s) fitting(s) until the fluid comes out and retighten the discharge line(s). Then start the pump which should prime quite instantly. Purge the air off the circuit, preferably using air bleed off valves or pressure test points. Let the pump discharge several minutes unloaded.

Pump mounted above fluid level: fill the pump through outlet port(s) with suitable and clean fluid and start rotation in jog mode. Purge the air off the circuit, preferably using air bleed off valves or pressure test points. Let the pump discharge several minutes unloaded.

- The motor-pump coupling must be made directly with a flexible coupling. Couplings that generate axial or radial loads on the pump shaft are not allowed.
- Refer to paragraph 4.3 for the characteristics and installation of the filtering elements.

### **11 - SAE J518 CONNECTION FLANGES**

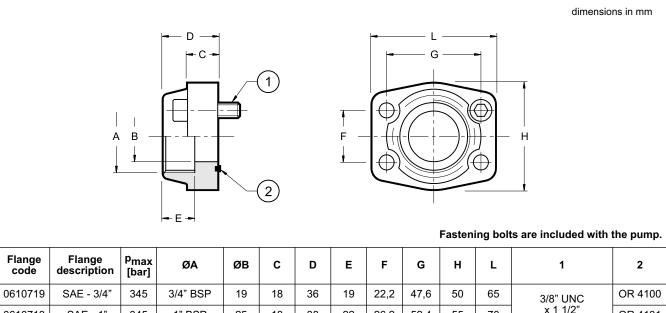

0010110	0,12 0,1	010	0,1 201	10	10	00	10	,_	11,0	00		3/8″ UNC	
0610713	SAE - 1"	345	1" BSP	25	18	38	22	26,2	52,4	55	70	x 1 1/2"	OR 4131
0610720	SAE - 1 1/4"	276	1 1/4" BSP	32	21	41	22	30,2	58,7	68	79	7/16" UNC x 1 1/2"	OR 4150
0610714	SAE - 1 1/2"	207	1 1/2" BSP	38	25	45	24	35,7	70	78	93	1/2" UNC	OR 4187
0610722	SAE - 2 1/2"	172	2 1/2" BSP	63	25	50	30	50,8	89	105	116	x 1 3/4"	OR 4175
0610723	SAE - 3"	138	3" BSP	73	27	50	34	62	106,4	116	134	5/8" UNC x 2"	OR 4337



#### DUPLOMATIC OLEODINAMICA S.p.A.

20015 PARABIAGO (MI) • Via M. Re Depaolini 24

Tel. +39 0331.895.111 Fax +39 0331.895.339

www.duplomatic.com • e-mail: sales.exp@duplomatic.com